


OT-ATA200SP+ Quick Start Guide

Installation and access:	2
Configure OT-ATA200SP+ to make VoIP calls	3
WAN Config	3
SIP Config	4
IAXConfig	5

Installation and access:

Installation:

Connected OT-ATA200SP+ as below:

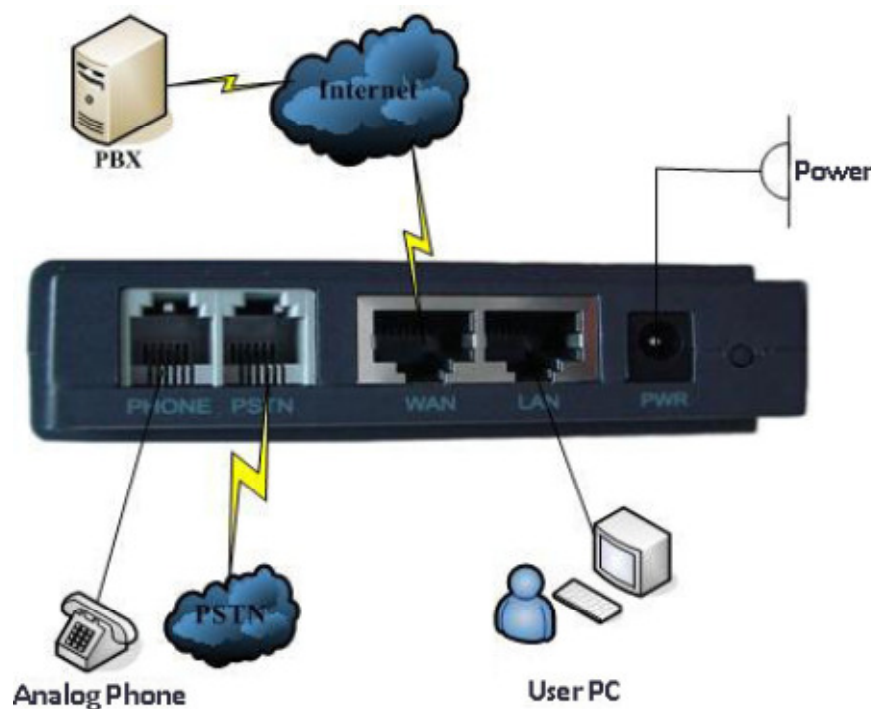

Listen OT-ATA200SP+ IP from the handset :

----pick up the handset ;

----enter `#*111#`;

Then the handset will clue OT-ATA200SP+'s IP address.

Modify your computer's IP address to the same network as OT-ATA200SP+.


Key in OT-ATA200SP+'s IP address in the web browser and press enter, then you can access OT-ATA200SP+'s web manage interface. Remember the account is admin/admin for administrator and guest/guest for user.

Configure OT-ATA200SP+ to make VoIP calls

WAN Config

Enter **Network_** → **WAN Config** to set the WAN setting:

OT-ATA200SP+ supports three different IP types: Static IP, Dynamic obtain IP (DHCP) and PPPoE. You can use either of these IP types to connect the internet.

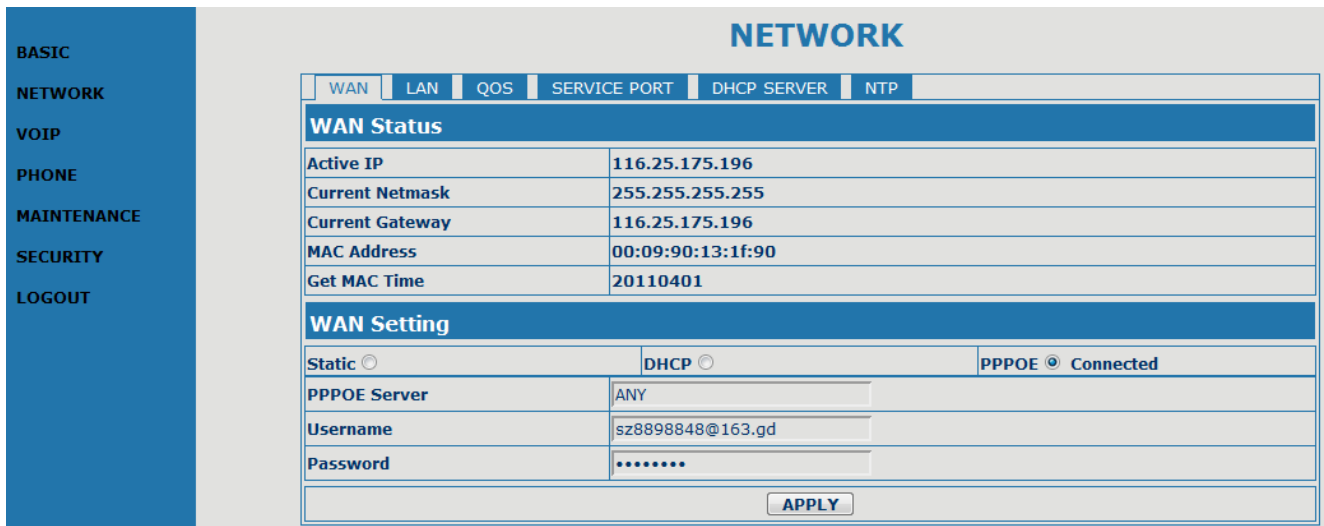

The screenshot shows the 'NETWORK' configuration page with a sidebar on the left containing menu items: BASIC, NETWORK, VOIP, PHONE, MAINTENANCE, SECURITY, and LOGOUT. The main content area is titled 'NETWORK' and has tabs for WAN, LAN, QOS, SERVICE PORT, DHCP SERVER, and NTP. The 'WAN' tab is selected, showing two sections: 'WAN Status' and 'WAN Setting'.

WAN Status	
Active IP	116.25.175.196
Current Netmask	255.255.255.255
Current Gateway	116.25.175.196
MAC Address	00:09:90:13:1f:90
Get MAC Time	20110401

WAN Setting	
Static <input type="radio"/>	DHCP <input type="radio"/> PPPOE <input checked="" type="radio"/> Connected
PPPOE Server	ANY
Username	sz8898848@163.gd
Password	*****
<input type="button" value="APPLY"/>	

Use Static IP:

- Select "Static";
- Enter the OT-ATA200SP+'s IP address in the "IP address" field.
- Set the "Netmask", default 255.255.255.0
- Enter the OT-ATA200SP+'s upper gateway IP address(for example:Router) in the "Gateway" field
- Key in the DNS information in the "Primary DNS" and "Alter DNS" fields.

Use DHCP:

- Select DHCP


If you have a DHCP server in your network, OT-ATA200SP+ will automatically obtain the network information from your DHCP server.

Use PPPoE:

- Select PPPoE

----Type your PPPoE dialup information in the PPPoE setting fields:PPPoE server(option), Username and password. Then the OT-ATA200SP+ will connect to the internet through PPPoE , and automatically obtain the IP address , Netmask,, Gateway, Primary DNS and Alter DNS information.

SIP Config

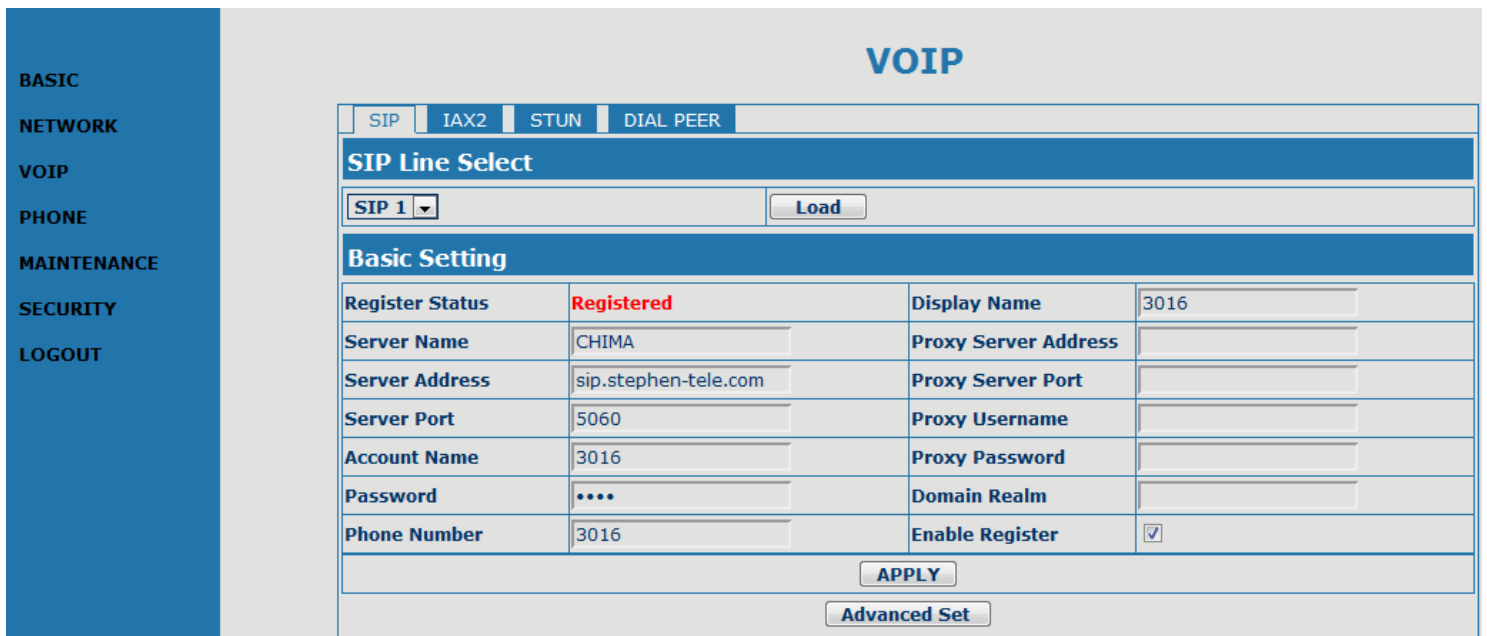


SIP Line Select			
SIP 1		Load	
Basic Setting			
Register Status	Registered	Display Name	3016
Server Name	CHIMA	Proxy Server Address	
Server Address	sip.stephen-tele.com	Proxy Server Port	
Server Port	5060	Proxy Username	
Account Name	3016	Proxy Password	
Password	Domain Realm	
Phone Number	3016	Enable Register	<input checked="" type="checkbox"/>

Enter **VoIP → SIP Config** setting page and set the sip information

- Register Server Addr : sip server address;
- Register Server Port : sip server register port;
- Register Username : username of your sip account;
- Register Password : password of your sip account;
- Register Number : Phone number of your sip account; the same as username if none
- check Enable Register; Then you can make VoIP calls if the WAN and SIP config is correct.

Notice: Please go to the "Config Manage" and save the config, otherwise you will lose the setting after device reboot.

IAX Config

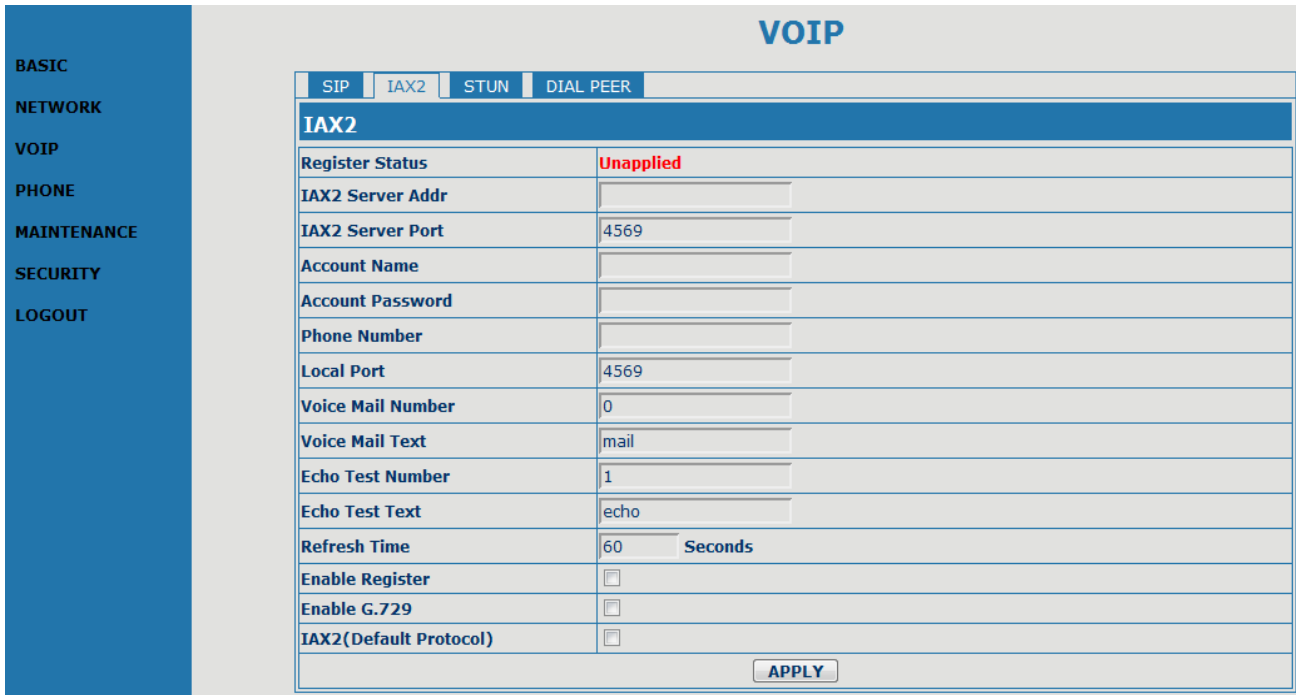

IAX2	
Register Status	Unapplied
IAX2 Server Addr	
IAX2 Server Port	4569
Account Name	
Account Password	
Phone Number	
Local Port	4569
Voice Mail Number	0
Voice Mail Text	mail
Echo Test Number	1
Echo Test Text	echo
Refresh Time	60 Seconds
Enable Register	<input type="checkbox"/>
Enable G.729	<input type="checkbox"/>
IAX2(Default Protocol)	<input type="checkbox"/>

APPLY

-----IAX Server Addr: IAX server address;

-----IAX Server Port: IAX server register port;

-----Account Name: username of your IAX account;

-----Account Password: Password of your IAX account.

-----Local port: Signal port of local,default port is 4569

-----Phone Number: Phone number of your IAX account; the same as username if none

-----Enable Register: enable or disable register

-----IAX(Default Protocol): If you want to use IAX account to call ,please select IAX(Default Protocol), if not the system will

choose SIP as default

Then you can make VoIP calls if the WAN and IAX config is correct.

Notice: Please go to the "Config Manage" and save the config, otherwise you will lose the setting after device reboot.